DRAWING KEY NUMBER	PART NUMBER	PART DESCRIPTION	QUANITY REQUIRED PER ASSY
		BODY ASSEMBLY	
1	035998	Body - Sunburst	1
2	010488	Shield - Preset control	1
3	010496	Shield - Pickup	2
4	010512	Shield - Master Control	1
5	018630	Glazier Point - #2	7
6	018556	Shim - Sponge Rubber, Adhesive back	4
7	016295	Screw - WOOD, RD. HD. PHIL., 3 x 1 STL. NKL. PLT.	8
8	016857	Cover - Pickup White	2
9	034777	Pickup Assembly (Lead)	1
10	035584	Pickup Assembly (Rhythm)	1
11	012369	Thimble - Bridge	1
11A	018648	Pin - Escutcheon	2
		PICKGUARD ASSEMBLY	
12	015578	Screw - SM. OV. HD. PHIL., #4 x 1/2 STL. NKL. PLT.	13
13	034793	Pickguard - Shell	1
14	040485	Pickguard - Shield	1
15	017061	Switch - 3 position	1
15A	019547	Knob - Switch control	
16	016469	Washer - Internal Tooth, Lock, Spec. Thin 1/2	1
17	022012	Nut - Hex 15/32 - 32 x 9/16 Brass Nkl.	1
18	016352	Nut - Hex 3/8 - 32 Thread	3
19	016436	Washer - Lock Internal Tooth 3/8	3
20	015453	Control - Volume	1
21	015479	Control - Tone	1
22	019505	Knob - Volume	1
23	019497	Knob - Tone	1
24	031153	Washer 3/8 Trim	1
25	021956	Jack - Phone	1
26	015545	Capacitor .03 Ceramic Disc.	1
27	019091	Sleeving - Yellow	1
28	015719	Screw - MACH. OV. HD. PHIL. #4 - 40 x 1/4 STL. NKL. PLT.	4
29	017079	Switch - Sliding Black, Pickup	1
30	010470	Bracket - Control	1
31	013342	Knobs - Black	2
32		Nut - Supplied with control only	2
33	016451	Washer - Internal Tooth	2
34	015529	Control - Volume	1
35	015511	Control - Tone	1
36	019091	Sleeving - Yellow	1
37	020859	Capacitor	1
		ADJUSTABLE BRIDGE ASSEMBLY	
38	038810	Adjustable Bridge Assembly Complete	1
39	038901	Channel Assembly	1
40	016097	Screws - Set, Cone Point #4-40 x . 1/2 STL. NKL. PLT.	2
41	015698	Screw - MACH. RD. HD. PHIL. # 4-40 x 5/8 STL. NKL. PLT.	6
42	019364	Spring - Compression 9 coils	2
43	019281	Spring - Compression 7 coils	2
44	019273	Spring - Compression 6 coils	2
45	013136	Bar - Adjustable Bridge	3
46	013128	Bar - Adjustable Bridge	3

DRAWING KEY NUMBER	PART NUMBER	PART DESCRIPTION	QUANITY REQUIRED PER ASSY
		ADJUSTABLE BRIDGE ASSEMBLY (continued)	
47	040196	Screw - SET. SOC. OV. PT. #4 - 40 x 1/4 STL. NKL. PLT.	8
48	016089	Screw - SET. SOC. OV. PT. #4 - 40 x 5/16 STL. NKL. PLT.	4
49	010454	Cover Adjustable Bridge	1
		TREMOLO ASSEMBLY	
50	015610	Screw - SM. OV. HD. PHIL. # 5 x 1 STL. NKL. PLT.	6
51	019927	Tremolo Assembly complete	1
52	010421	Plate - Base Tremolo	1
53	010413	Plate - Tail Piece Floating	1
54	010439	Plate Stiffner Tail piece	1
55	010447	Guide - Tailpiece	1
56	012393	Sleeve - Tremolo Lever	1
57	038794	Lever Assembly (Lever And Cap)	1
58	010397	Lever - Tremolo	1
59	019463	Cap - Tremolo	1
60	024992	Perch - Spring	1
61	019307	Spring - Tremolo Action	1
62	015966	Screw - MACH. B. H. 8 - 32 x 1. 1/4 STL. NKL. PLT.	1
63	012658	Nut - Lock Tremolo	1
64	012377	Button - Lock Tremolo	1
65	010504	Washer - Spring	1
66	015891	Screw - MACH. TH. PHIL. #8-32 x 1/4 STL. NKL. PLT.	3
67	015883	Screw - MACH. FL. HD. PHIL # 8-32 x 1/4 STL. NKL. PLT.	1
		NECK AND KEY ASSEMBLY	
68	015636	Screw - SM. OV. HD. PHIL. #8 x 1 - 3/4 STL. NKL. PLT.	4
69	010215	Plate - Neck	1
70	040501	Neck and Key Assembly (includes neck with keys installed and neck rod adjusting nut).	1
71	040519	Neck Fabrication Assembly (Includes neck and neck rod adjusting nut).	1
72	012252	Nut - Neck Rod Adjusting	1
		KEY ASSEMBLY	
73	016329	Screw - WOOD, RD. HD. PHIL. #3 x 3/8 STL. NKL. PLT.	12
74	053694	Key Assembly Complete	6
75	033738	Cover - Key Assembly	6
76	033761	Housing - Key Assembly	6
77	034330	Post and Gear - Key Assembly	6
78	034363	Head and Worm Metal	6
		STRING GUIDE ASSEMBLY	
79	016337	Screw - RD. HD. PHIL. #3 x 5/8 STL. NKL. PLT.	1
80	010389	Guide - String	1
81	016881	Spacer - String Guide	1
		STRAP BUTTON ASSEMBLY	
82	016188	Screw - WOOD. OV. HD. PHIL. #6 x 1 STL. NKL. PLT.	2
83	012344	Button - Strap	2

DRAWING KEY NUMBER	PART NUMBER	PART DESCRIPTION	QUANITY REQUIRED PER ASSY
		STRING ASSEMBLY	
84	017798	String Set Complete (6 Strings) (1500)	1
85	017806	"E" String (1) .012 (1501)	1
86	017814	"B" String (2) .016 (1502)	1
87	017822	"G" String (3) .026 (1503)	1
88	017830	"D" String (4) .034 (1504)	1
89	017848	"A" String (5) .044 (1505)	1
90	017855	"E" String (6) .052 (1506)	1
		MISCELLANEOUS PARTS NOT LISTED	
	017103	Strap - Guitar	1
	045278	Manual - Instruction	1
	018531	Allen Key - Bridge Adjusting .050	1

G5T-3-C

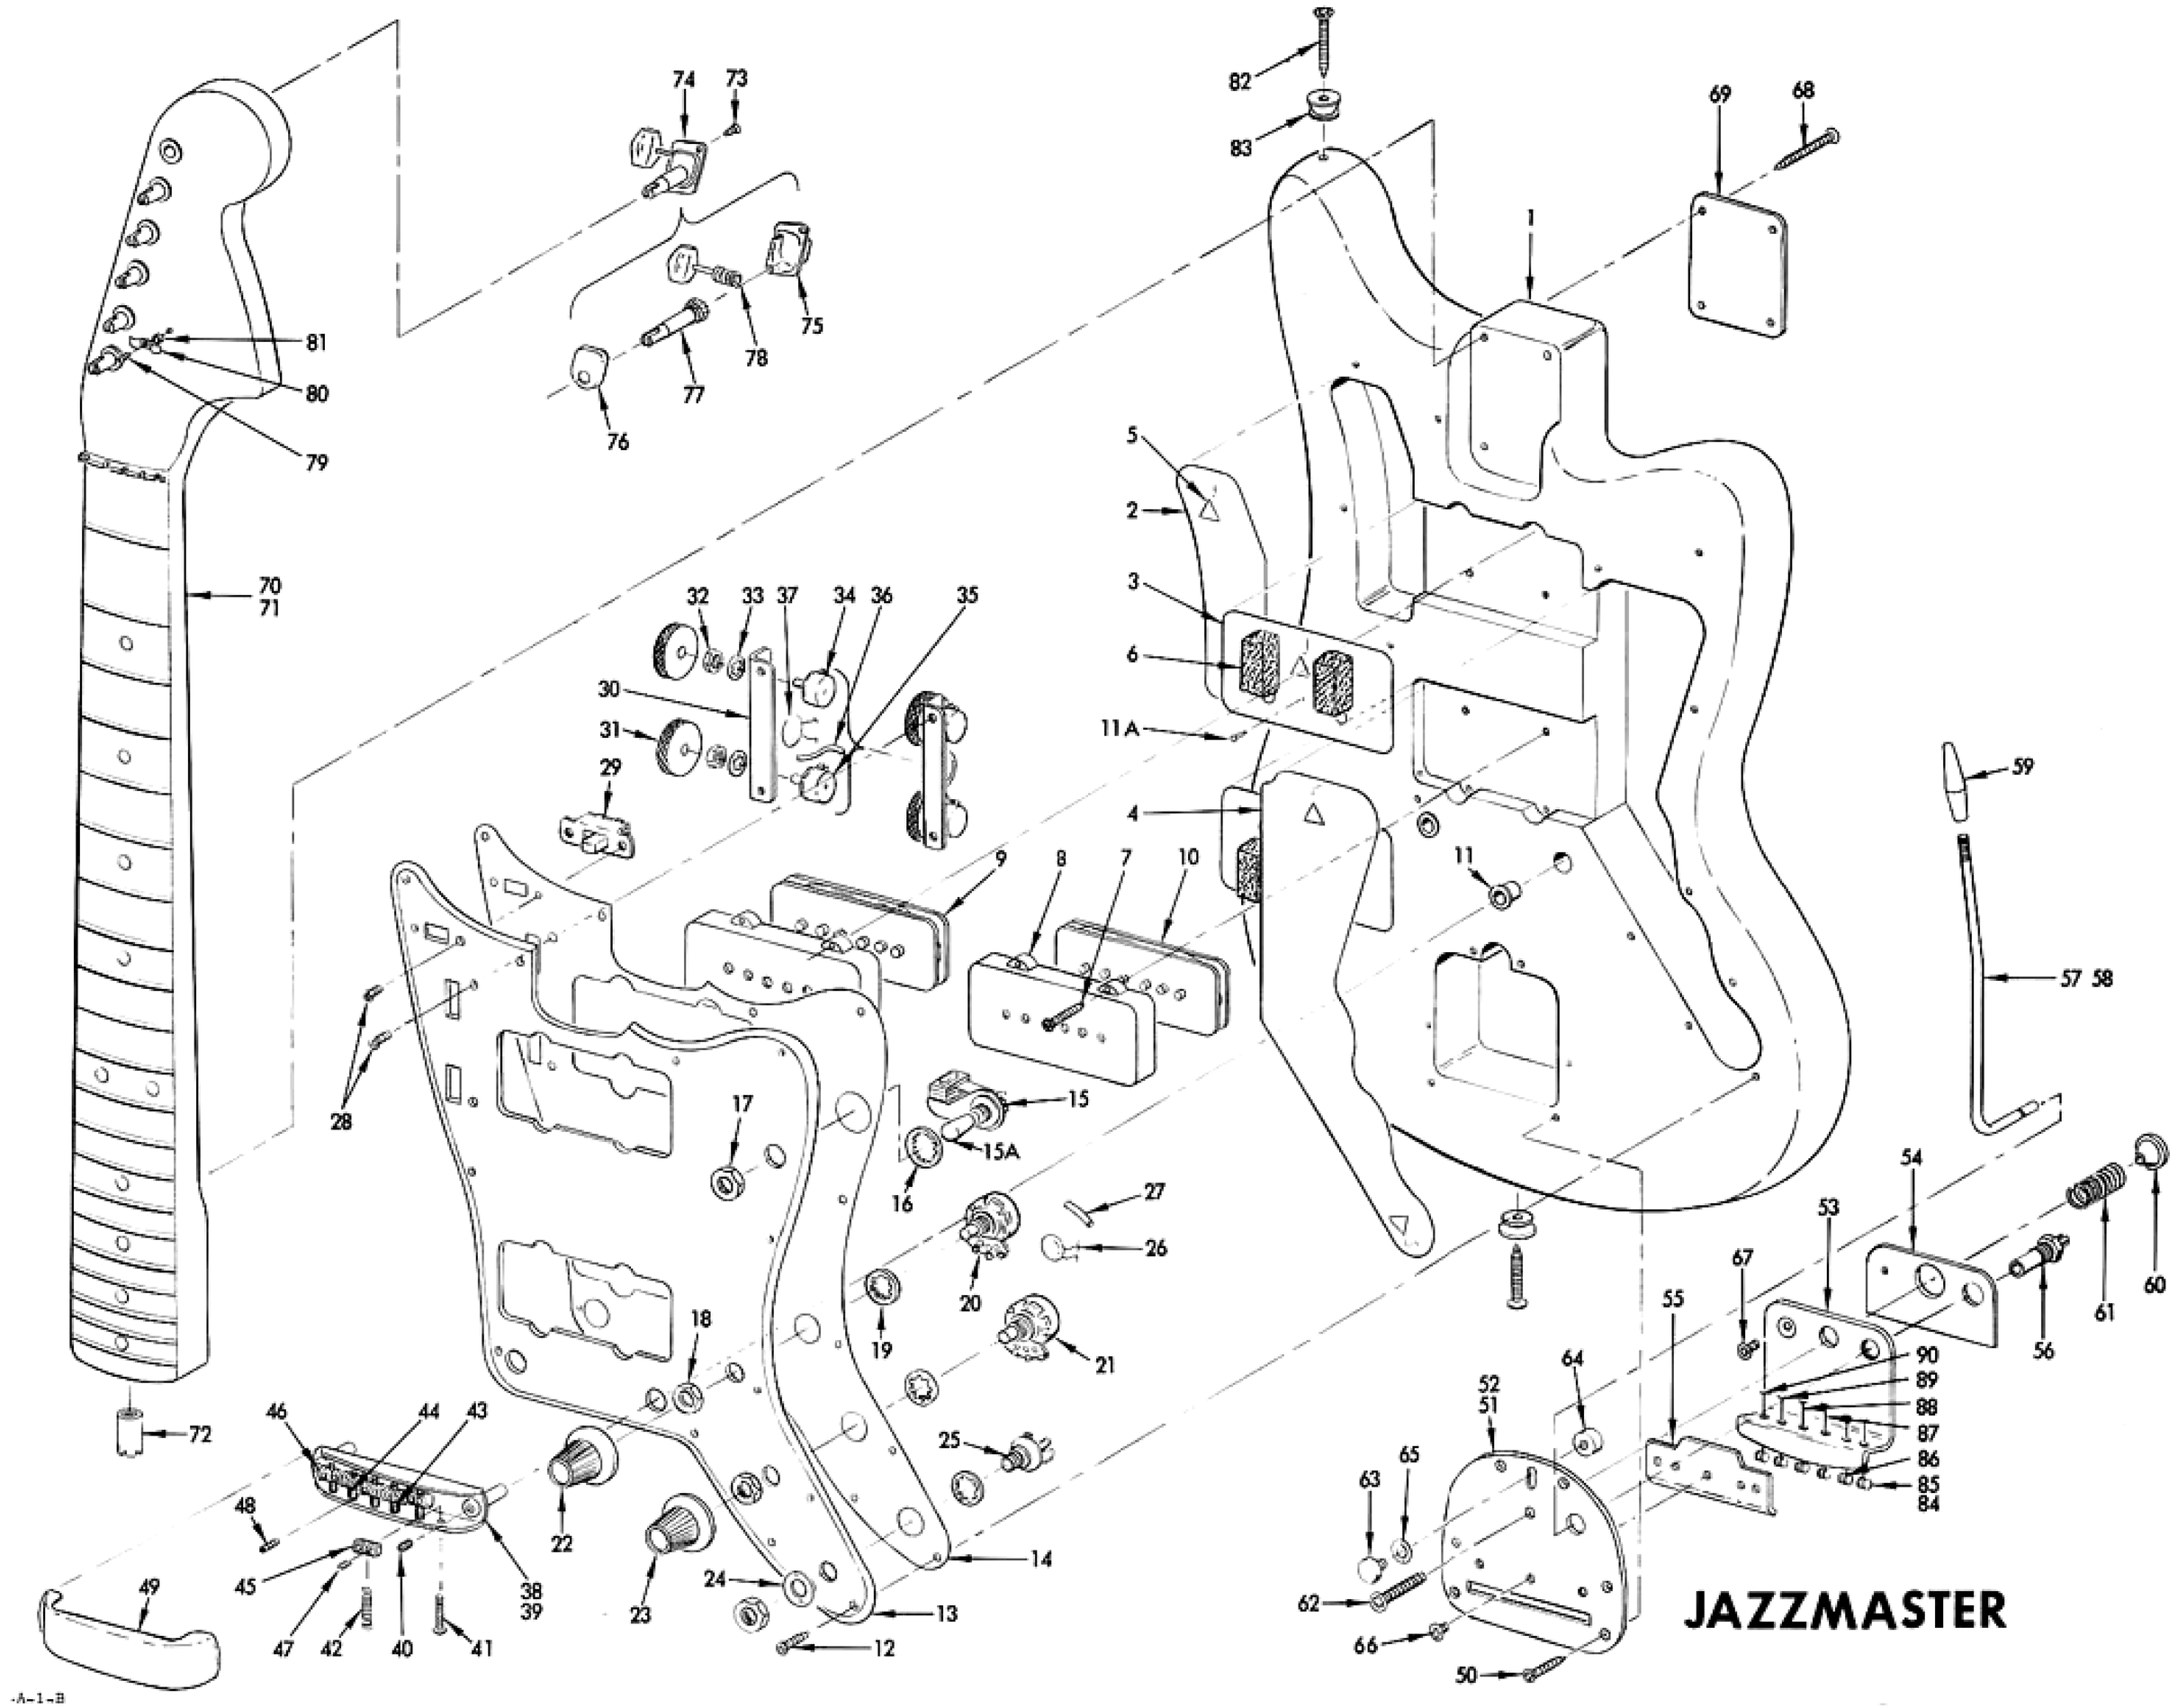
JAZZMASTER
-A-1-B

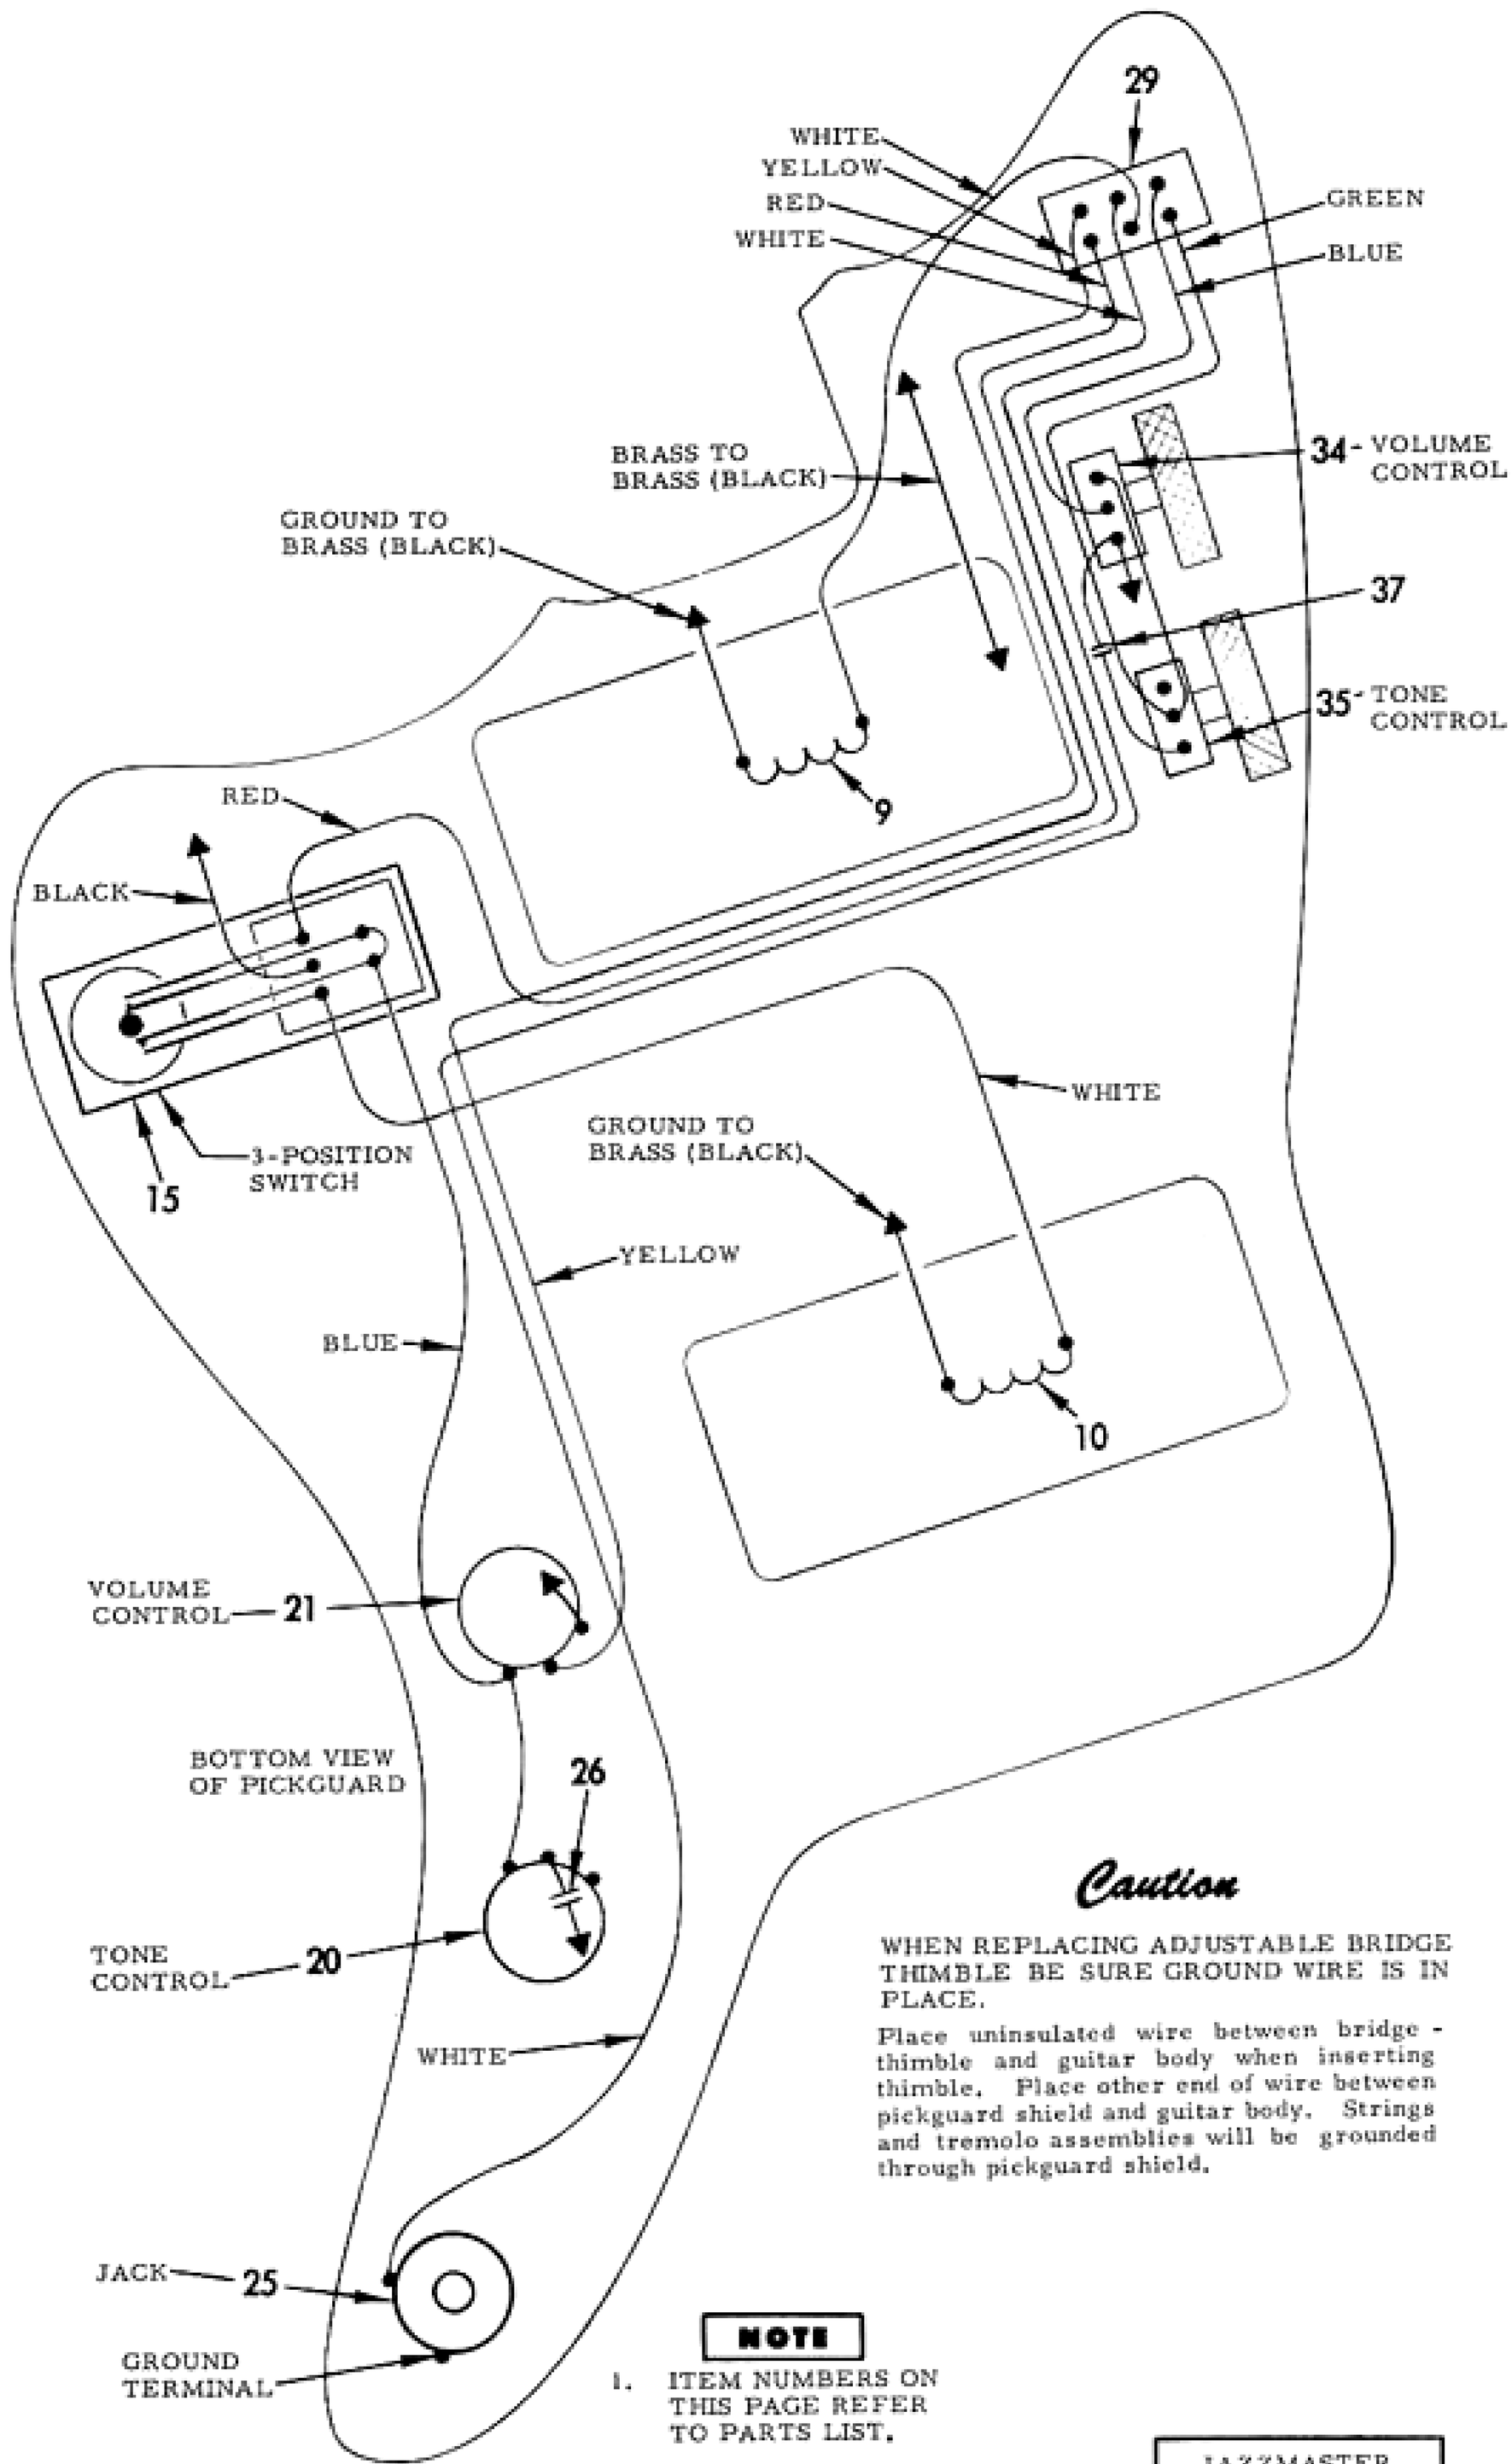

Caution

WHEN REPLACING ADJUSTABLE BRIDGE THIMBLE BE SURE GROUND WIRE IS IN PLACE.

Place uninsulated wire between bridge - thimble and guitar body when inserting thimble. Place other end of wire between pickguard shield and guitar body. Strings and tremolo assemblies will be grounded through pickguard shield.

NOTE

1. ITEM NUMBERS ON THIS PAGE REFER TO PARTS LIST.
2. ▲ INDICATES SOLDER CONNECTIONS.

JAZZMASTER WIRING DIAGRAM

G51-2-A